

HITACHI

Camera Accessories

	KP-M1A, M2A, M2R, M3A, M3R	KP-M20 / KP-M30	KP-F30, KP-F33, KP-F80	KP-FB30SCL, KP-FBR30SCL	KP-FD30, KP-FD30M	KP-FD30CL	KP-F30SCL, KP-FR30SCL	KP-F31SCL, KP-FR31SCL	KP-F39SCL, KP-FR39SCL	KP-F80SCL, KP-FR80SCL	KP-F140F, KP-FD32F, KP-FD140F	KP-F33GV, KP-FD33GV	KP-F83GV, KP-FD83GV	KP-F140GV, FD140GV, KP-F145GV	KP-F202GV, KP-FD202GV	KP-F500GV, KP-FD500GV	KP-F100B, F100BCL	KP-F120, KP-F120CL	KP-F120F	KP-FD140SCL, KP-FD500SCL	KP-F145WCL	KP-F200CL	KP-F200SCL, KP-FR200SCL	KP-FM200WCL / KP-FMR200WCL	KP-FD202CL	KP-F230SCL, KP-FR230SCL	KP-FM400WCL	KP-F500SCL, KP-FR500SCL	KP-D20A, KP-D20B	HV-D30	HV-F22GV	HV-F202GV	HV-F22F, HV-F31F	HV-F22CL, HV-F31CL	HV-F202SCL	HV-HD30	HV-HD201M
Power Supplies	45601-C1	R	R	R	R	x	R	R	R	R						R	R	R	R	R	R	R	R	R	R	R	x	x	x	x	x	x					
	45601-C4	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x						
	45601-C5	x	x	x		x				x						x	x	x										x	x	x	x	x	x				
	45601-C6																																				
	45601-C9	x	x	x																																	
	45601-C15				x																																
DV12-C1	R	R	R	R	x	R	R	R	R	R						R	R	R	R	R	R	R	R	R	R	x	x	x	x	x	x						
DV12-C4	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
DV12-C7																																	x				
Junction Box	JU-M1A	R		R			R	R	R							R	R	R	R	R	R	R	R	R	R												
	JU-F30		R	R			R										R	R	R	R	R	R	R	R	R												
Level Converter	JU-C20																											O	O								
	JU-Z2																											O	O								
Junction Box Cables	C201 KS	R	R	R	R		R	R	R	R						R	R	R	R	R	R	R	R	R	R												
	C501 KS	R	R	R	R		R	R	R	R						R	R	R	R	R	R	R	R	R	R												
	C102 KS	R	R	R	R		R	R	R	R						R	R	R	R	R	R	R	R	R	R												
Remote Head Camera Cables	C-501KAJ																											x									
	C-102KAJ																											x									
	C-201KAJ																											x									
	C-551KHD																																				
	C-102KHD																																				
	C-202KHD																																				
Remote Control Cables	C9D232C-6																x	x			x						x	x	x								
	C9D232CF-6																																				
	C-152-RC2																											O	O	O							
	C-302-RC2																											O	O	O							
	C-602-RC2																											O	O	O							
	C-103-RC2																											O	O	O							

R Junction Boxes require a camera cable and a C1 type power supply in order to power the camera.

O Remote Control Units and Level Converters require a cable to work with the camera.

x These items require no additional interface components.

HITACHI

Camera Accessories

	KP-M1A, M2A, M2R, M3A, M3R	KP-M20 / KP-M30	KP-F30, KP-F33, KP-F80	KP-FB30SCL, KP-FBR30SCL	KP-FD30, KP-FD30M	KP-FD30CL	KP-F30SCL, KP-FR30SCL	KP-F31SCL, KP-FR31SCL	KP-F39SCL, KP-FR39SCL	KP-F80SCL, KP-FR80SCL	KP-F140F, KP-FD32F, KP-FD140F	KP-F33GV, KP-FD33GV	KP-F833GV, KP-FD83GV	KP-F140GV, FD140GV, KP-F145GV	KP-F202GV, KP-FD202GV	KP-F500GV, KP-FD500GV	KP-F100B, F100BCL	KP-F120, KP-F120CL	KP-F120F	KP-FD140SCL, KP-FD500SCL	KP-F145WCL	KP-F200CL	KP-F200SCL, KP-FR200SCL	KP-FM200WCL / KP-FMR200WCL	KP-FD202SCL	KP-F230SCL, KP-FR230SCL	KP-FM400WCL	KP-F500SCL, KP-FR500SCL	KP-D20A, KP-D20B	HV-D30	HV-F22GV	HV-F22GV	HV-F22CL, HV-F31CL	HV-F202SCL	HV-HD30	HV-HD201M
Output Cables	C9DRGB																										x									
	C15HDYC-15		x																								x									
	C15HDx5-15PR		x																								x									
	C15HDx5-15		x																								x			x	x					
	C15HDx7-15		x																								x			x	x					
	CSV10																										x				x					
	CSV20																										x				x					
CameraLink Cables																																				
MDR-MDR	C-201CL					x											x	x		x										x						
MDR-MDR	C-301CL				x											x	x		x											x						
MDR-MDR	C-501CL			x											x	x		x												x						
SDR-MDR	C-201SCL		x			x	x	x	x								x	x		x	x	x	x	x	x					x						
SDR-MDR	C-301SCL		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-MDR	C-501SCL		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-MDR	MCLCP-2.0-P		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-MDR	MCLCP-3.0-P		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-MDR	MCLCP-5.0-P		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-SDR	MCLCP-2.0-MP		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-SDR	MCLCP-3.0-MP		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-SDR	MCLCP-3.0-MP		x			x	x	x	x							x	x		x	x	x	x	x	x	x			x			x					
SDR-MDR	POMCLP-2.0-P		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
SDR-MDR	POMCLP-3.0-P		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
SDR-MDR	POMCLP-5.0-P		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
SDR-SDR	C-201PCL SS		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
SDR-SDR	C-301PCL SS		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
SDR-SDR	C501PCL SS		P			P	P	P	P								P	x		P	x	P	P	P	x	P										
	C26PIG			x												x																x				
	C50PIG															x																				

P Indicates a PoCL CameraLink cable for use with the PCL versions of the listed cameras

x These items require no additional interface components.

HITACHI Camera Accessories

		KP-M1A, M2A, M2R, M3A, M3R	KP-M20 / KP-M30	KP-F30, KP-F33, KP-F80	KP-FB30SCL, KP-FBR30SCL	KP-FD30, KP-FD30M	KP-FD30CL	KP-F30SCL, KP-FR30SCL	KP-F31SCL, KP-FR31SCL	KP-F39SCL, KP-FR39SCL	KP-F80SCL, KP-FR80SCL	KP-F140F, KP-FD32F, KP-FD140F	KP-F33GV, KP-FD33GV	KP-F83GV, KP-FD83GV	KP-F140GV, FD140GV, KP-F145GV	KP-F202GV, KP-FD202GV	KP-F500GV, KP-FD500GV	KP-F100B, F100BCL	KP-F120, KP-F120CL	KP-F120F	KP-FD140SCL, KP-FD500SCL	KP-F145WCL	KP-F200CL	KP-F200SCL, KP-FR200SCL	KP-FM200WCL / KP-FMR200WCL	KP-FD202SCL	KP-F230SCL, KP-FR230SCL	KP-FM400WCL	KP-F500SCL, KP-FR500SCL	KP-D20A, KP-D20B	HV-D27A, HV-37A	HV-D30	HV-F22GV	HV-F202GV	HV-F22F, HV-F31F	HV-F22CL, HV-F31CL	HV-F202SCL	HV-HD30	HV-HD201M
GigE Cables	F-GEVP-2.0-P							x	x	x	x	x																x	x										
	F-GEVP-3.0-P							x	x	x	x	x																x	x										
	F-GEVP-5.0-P							x	x	x	x	x																x	x										
IEEE-1394 Cables	C-1394A-10																	x													x								
	C-1394B-15							x																															
	C-202RB						x																																
Tripod Adapter	TA-M1	x							x	x	x	x	x																		x								
	TA-D20																															x							
	TA-F30	x	x																																				
	TA-F120		x	x																																			
	TA-FD140									x									x	x		x																	
	TA-F200S							x		x	x																	x											
	TA-F230						x																						x										
	TA-F500																		x	x		x	x		x	x	x	x	x										
	TA-FB30	x																																					
Lens Accessories	Cs to C Mount			x	x				x	x																				x									
	2XHE Extender	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
	EX Tube	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
Lens Plug	E4-191J-100					x	x																						x	x	x	x	x	x	x				
Dummy Glass	ARC1214	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x							
Remote Unit	RC-Z3																											O	O		O	O							
12-pin Plug	HR10A-10P-12S	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	s	x	x	s	x	s	s	x	s		x	x	x	x	x				
6-pin Plug	HR10A-7P-6S																	x	x																				
4-pin Plug	HR10A-7P-4P																											x	x	x	x								
3-pin Plug	R03-P3F	R	R	R	x	R	R	R	R	R										R	R	R	R	R	R	R	R	x	x	x	x		x						

R These are accessory 3 pin power plugs for use with cameras or junction boxes requiring C1 type power supplies.

S These items only work with the SCL versions of the listed cameras, not applicable with the PCL version

O Remote Control Units and Level Converters require a cable to work with the camera.

x These items require no additional interface components.